



- A ESP System Panel (available separately)
- B BMV-600 connection to **DC Link Box** via RJ12 cable
- C Voltage sense cable for starter battery.
Only required if using System Panel.
- D Mag latch contactor for battery isolation (available separately).
Operated by control on System Panel
Only required if using System Panel.